



## **citronic CSL-SERIES Mixing Consoles User Manual**

[Home](#) » [citronic](#) » [citronic CSL-SERIES Mixing Consoles User Manual](#) 




**CSP & CSL-SERIES**

**MIXING CONSOLES**

Item ref: 170.841UK, 170.843UK, 170.845UK, 170.851UK,  
170.853UK, 170.855UK

User Manual

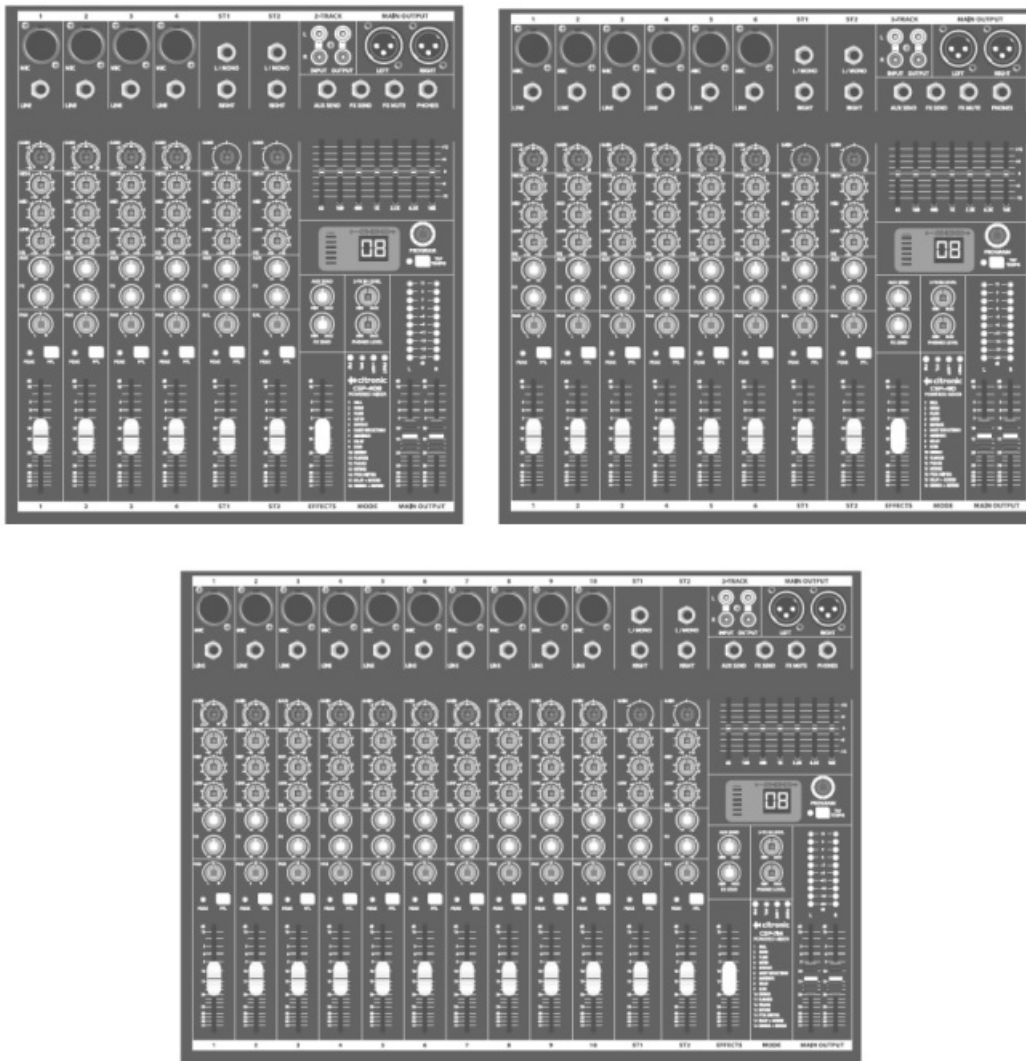

Version 2.1



**Caution:** Please read this manual carefully before operating. Damage caused by misuse is not covered by the warranty.

## Contents

- [1 Introduction](#)
- [2 Package Contents](#)
- [3 Safety](#)
- [4 Console layout](#)
- [5 Mic/Line Input Section](#)
- [6 Specifications](#)
- [7 Troubleshooting](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

## Introduction

Thank you for choosing a CSP/CSL mixing console as part of your professional sound system. This product has been developed to provide a wide range of facilities for professional and reliable sound reinforcement. Please

read and keep this manual to achieve the best results from your purchase and avoid damage through misuse.

## Package Contents

- CSP powered or CSL passive mixing console
- Mains lead(s)
- User manual

If you find any accessories is missing or the product has arrived with any problems, please contact your retailer at once. This product contains no user-serviceable parts, so make no attempt to try to fix or modify this item yourself as this will invalidate the warranty. We recommend you keep the original package and proof of purchase for any possible replacement or return issues.

## Warning

To prevent the risk of fire or electric shock, do not expose any of the components to rain or moisture. Avoid impact or heavy vibration to any of the components. No user-serviceable parts inside – refer servicing to qualified service personnel.

## Safety

- Please observe the following warning conventions



**CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN**



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

- Ensure that the correct mains lead is used with the adequate current rating and mains voltage is as stated on the unit
- Avoid ingress of water or particles into any part of the housing. If liquids are spilled on the console, stop using immediately, allow the unit to dry out and have checked by qualified personnel before further use
- Do not cover or obstruct cooling vents



**Warning: this unit must be earthed**


### Placement

- Keep the console out of direct sunlight and away from heat sources.
- Do not place heavy objects on top of the control surface
- If rack-mounting, use the correct rack-ears and ensure adequate support for the weight of the product.
- Allow adequate space for airflow and keep the console away from damp or dusty environments.

### Cleaning

- Use a soft dry or slightly damp cloth to clean the surfaces of the console
- A soft brush can be used to clear debris from between controls without damaging them
- To avoid damage, do not use solvents to clean the components


# Console layout

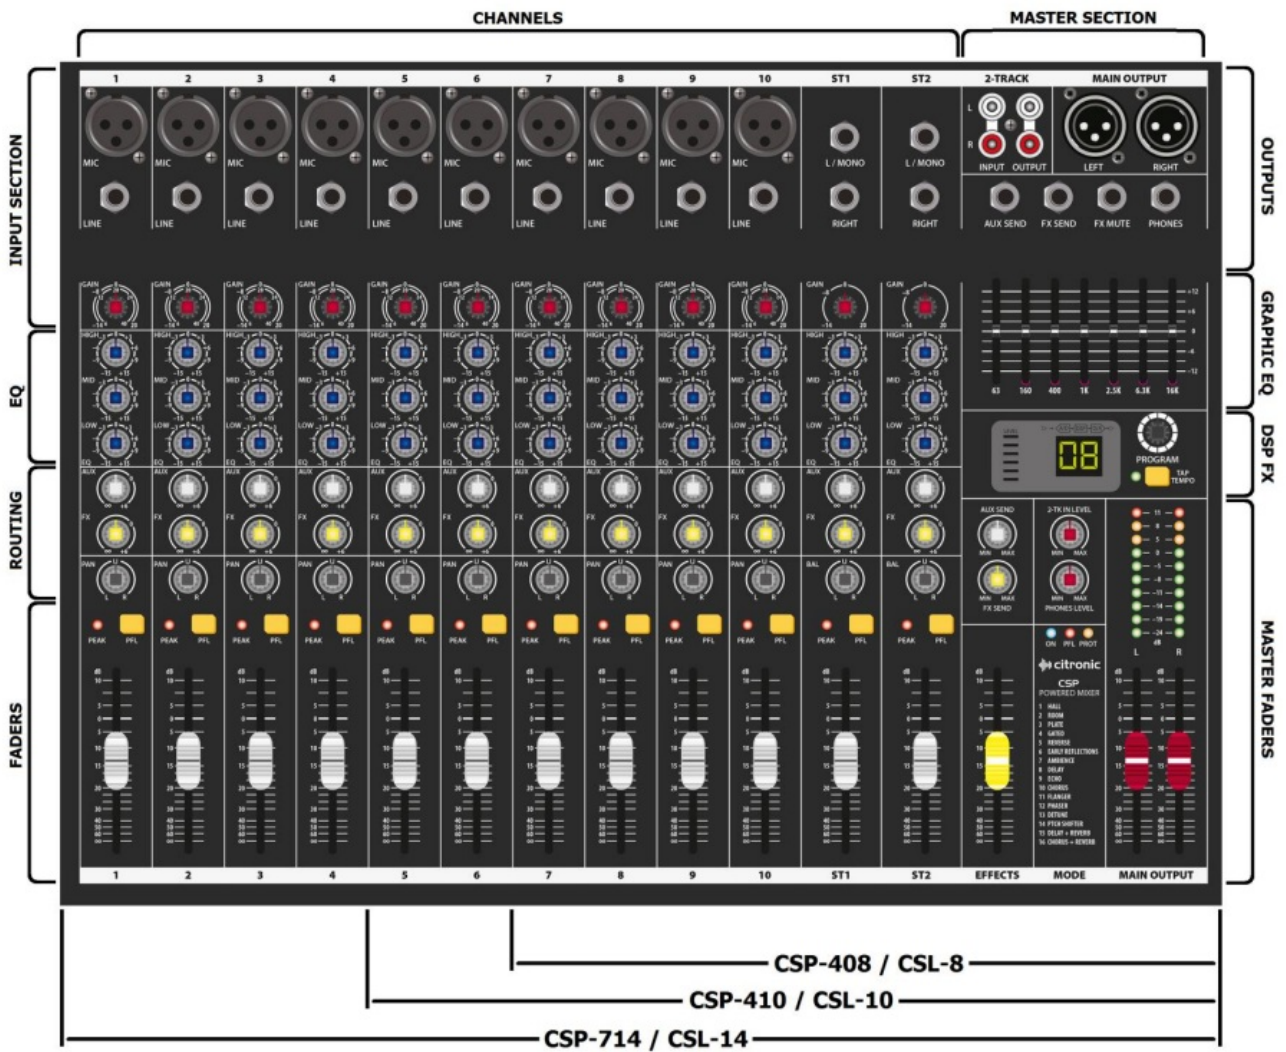


Each CSP/CSL mixing console has comprehensive input and output sections which can be split further into various stages of processing and routing. All preamps have studio-grade, low-noise architecture for the cleanest possible path throughout the signal chain. The input stages are repeated across each channel of the console, which simplifies operation and enables quick and easy location of various controls. The following pages of this manual are divided up into these stages to explain the details and function of each control.

## Mic/Line Input Section

Channel inputs and inserts are provided as XLR and/or 6.3mm jack sockets. The connections for these inputs are assigned as follows.

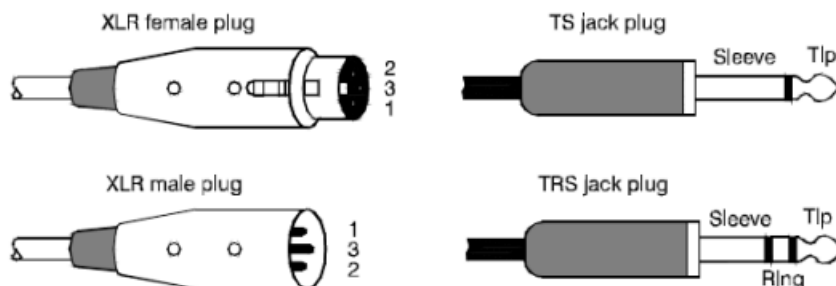

## 1. MIC input

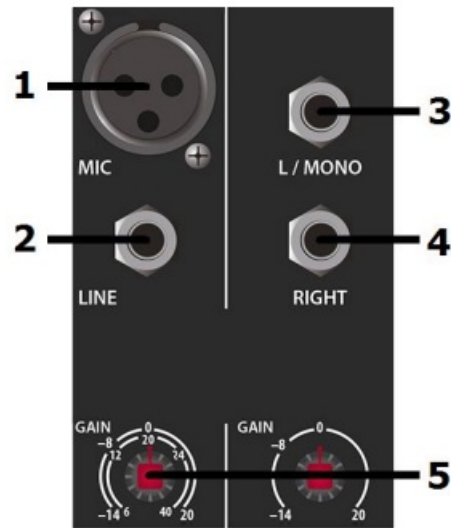

### Balanced Unbalanced

Balanced	Pin 1 = Ground	Pin 2 = Signal +	Pin 3 = Signal —
Unbalanced	Pin 1 = Ground	Pin 2 = Signal +	Pin 3 = Ground

## 2. LINE input

### Balanced Unbalanced

Balanced	Tip = Signal +	Ring = Signal —	Sleeve = Ground
Unbalanced	Tip = Signal +	—	Sleeve = Ground

## 3. L/MONO input

## 4. RIGHT input

Balanced	Tip = Signal +	Ring = Signal —	Sleeve = Ground
Unbalanced	Tip = Signal +	—	Sleeve = Ground

## 5. GAIN control


This control trims the input signal to the optimum level for the channel strip circuitry. Too low a signal level can result in a weak signal-to-noise ratio and too high can result in overload and distortion in the signal output.

The PEAK LED next to the channel fader will give an indication of the signal level. Ideally, the Gain rotary control should be adjusted so that the loudest passages of the the input signal (e.g. bass drum beats) will just momentarily trigger the CLIP LED.

Anything longer than a momentary flicker of the CLIP LED means that the Gain should be reduced. Using the PFL button further down the channel strip gives a more detailed view of the channel level on the main VU LEDs.

### EQ Section

## 6. HIGH

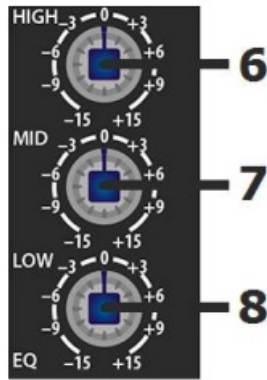


This control can boost or cut the high frequencies (center 12kHz) by  $\pm 15$ dB (12 o'clock position is zero)

7. MID


This control can boost or cut the mid frequencies (center 2.5kHz) by  $\pm 15$ dB (12 o'clock position is zero)

8. LOW

This control can boost or cut the low frequencies (center 80Hz) by  $\pm 15$ dB (12 o'clock position is zero)

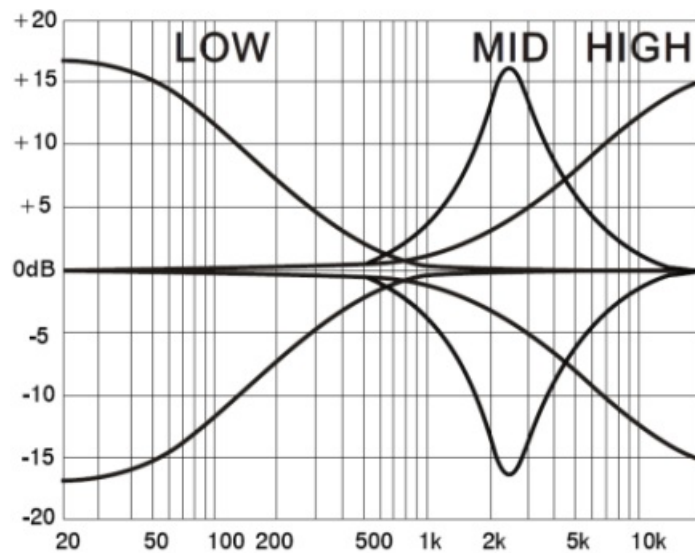

**Channel Routing**

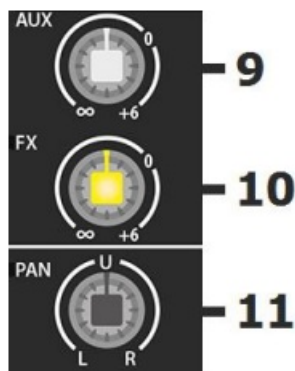

9. AUX

This control governs the amount of signal from the channel routed to the AUX SEND or auxiliary output to external equipment. (This control is post-fader – i.e. the signal routed to AUX SEND is also affected by the channel fader level)

10. . FX


This control governs the amount of signal from the channel routed to the DSP effects engine. If a jack is connected to the FX SEND connector (see 37 below), this will operate as an extra AUX output (This control is post-fader – i.e. the signal routed to AUX SEND is also affected by the channel fader level)

#### 11. PAN/BAL

This control adjusts the amount of signal from the channel fed to Left or Right outputs.

This varies the point in the stereo field that the signal appears. For ST1 and ST2 channels, the PAN control is replaced with a BAL control for the Left/Right balance.

#### Channel Faders

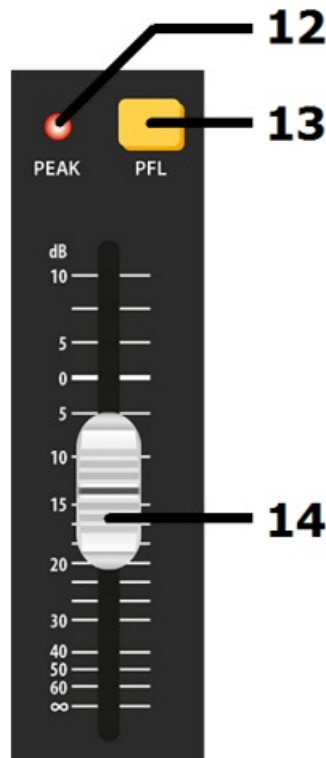


#### 12. PEAK LED

An indicator showing when the signal reaches the maximum level and clipping.

#### 13. PDF

Pre-Fader Listen sends the channel signal direct to monitoring. This means that the channel signal is shown on the main VU LEDs. Also, the signal is routed directly to the headphone's output. This allows the particular channel signal to be checked. If many PFLs or AFLs are selected, all are routed to monitoring.


#### 14. Channel fader 60mm fader to adjust the channel level to the master output. A dB scale is provided to show the level of boost or cut. **Graphic Equalizer**

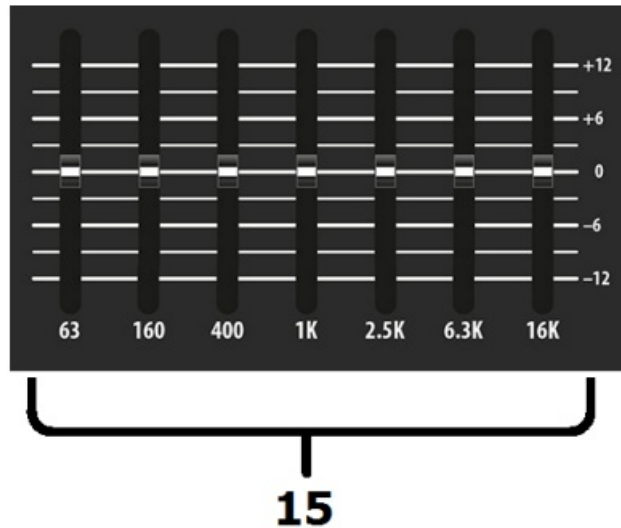

The main EQ is a stereo 7-band graphic equalizer, offering refined audio spectrum sharing and feedback control for live mic situations.

15. EQ sliders.

Each slider controls a boost or cuts of up to 12dB centered at the specified frequency. **DSP Effects Engine**

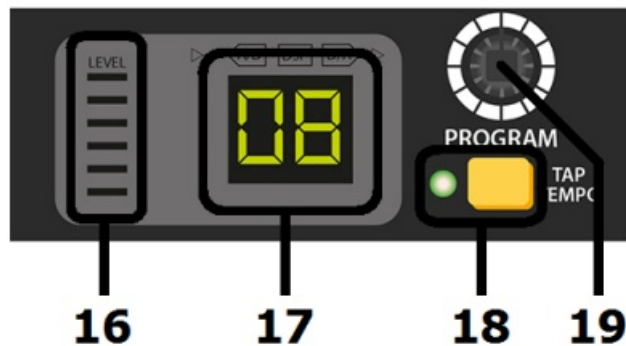

CSP and CSL series mixers each have an internal 24-bit DSP processor for audio effects, as detailed on the DSP Table (on the following page)

16. 6-segment LED

Indicates overall input level to DSP

17. Program display

Indicates selected program (see table on next page)

18. TAP

Press once to switch the rotary control (27) to PARAMETER 2.

Tap the TAP button rhythmically more than twice to set a tempo for time effects An LED to the left of the Tap switch flashes to indicate time intervals

19. PROGRAM/PARAMETER

Turn this rotary encoder to select a program.

The numerical display will flash the selected program number.

Press the encoder to confirm the selection, the display will stop flashing & the selected program will be active.

Press the encoder again and a dot will appear in the display indicating PARAMETER 1. Turning the encoder will change PARAMETER 1 for the selected program as detailed in the DSP Table on the following page.

Pressing the TAP button (26) will switch to PARAMETER 2 and then turning the encoder will change

PARAMETER 2 for the selected program.


These parameter changes are stored for when the program is selected in the future.

### DSP EFFECTS TABLE


PROGRAM	EFFECT	PARAMETER 1	MIN	MAX	PARAMETER 2	MIN	MAX	TAP
01	Hall	Reverb time	01 (approx 1 second)	10 (approx 8 seconds)	Brilliance	OFF	ON	LED on/off
02	Room	Reverb time	01 (approx 0.5 second)	10 (approx 4 seconds)	Brilliance	OFF	ON	LED on/off
03	Plate	Reverb time	01 (approx 0.5 second)	10 (approx 5 seconds)	Brilliance	OFF	ON	LED on/off
04	Gated	Reverb time	01 (approx 0.1 second)	10 (approx 1 second)	Brilliance	OFF	ON	LED on/off
05	Reverse	Reverb time	01 (approx 0.1 second)	10 (approx 1 second)	Brilliance	OFF	ON	LED on/off
06	Early Reflections	Room size	01 (small)	10 (very large)	Brilliance	OFF	ON	LED on/off
07	Ambiance	Area size	01 (small)	10 (very large)	Brilliance	OFF	ON	LED on/off
08	Delay	Repeats	01 (no regeneration)	20 (max regeneration)	Delay Time (bpm)	07 (72bpm)	60 (600bpm)	Blinking BPM Tempo
09	Echo	Repeats	01 (no regeneration)	40 (max regeneration)	Delay Time (bpm)	07 (72bpm)	60 (600bpm)	Blinking BPM Tempo

10	Chorus	Depth	01(1%)	99 (99%)	Mod Speed bpm	02 (24bpm)	48 (480bpm)	Blinking Mod Speed
11	Flanger	Depth	01 (1%)	99 (99%)	Mod Speed bpm	02 (24bpm)	48 (480bpm)	Blinking Mod Speed
12	Phaser	Depth	01 (1%)	99 (99%)	Mod Speed bpm	02 (24bpm)	48 (480bpm)	Blinking Mod Speed
13	Detune	Depth	01 (1%)	99 (99%)	2nd voice delay	05 (5ms)	50 (50ms)	LED on/off
14	Pitch Shift	Semitone steps	-12 (1 octave down)	+12 (1 octave up)	Detune	OFF (0%)	ON (25%)	LED on/off
15	Delay + Reverb	Ratio	-9 (90% Dly / 10% Rev)	9 (10% Dly / 90% Rev)	Delay time (bpm)	11 (116bpm)	60 (600bpm)	Blinking BPM Tempo
16	Chorus + Rev	Ratio	-9 (90% Cho / 10% Rev)	9 (10% Cho / 90% Rev)	Reverb time	12 (1.2secs)	24 (2.4secs)	LED on/off

### Master Output Section

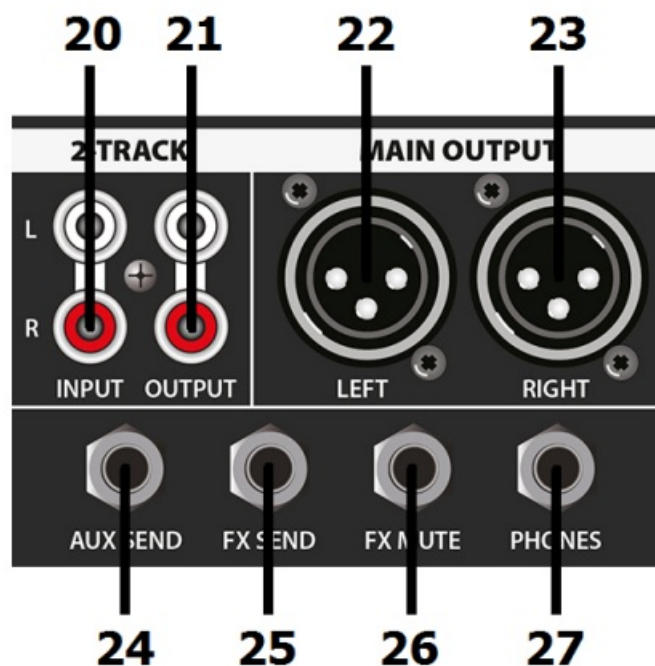

20. 2 TRACK INPUT Left + Right RCA input for connecting a playback device (e.g. CD or mp3) governed by the 2TK IN LEVEL rotary control. This output is pre-master-fader. (i.e. unaffected by main Left + Right faders)
21. 2 TRACK OUT Left + Right RCA connection for main mix output to a recording device. This output is pre-master-fader
22. MAIN L OUTPUT Balanced XLR output for main Left out
23. MAIN R OUTPUT Balanced XLR output for main Right out
24. AUX SEND  
Unbalanced jack output from AUX SEND routes.  
The mix is governed by AUX levels from each channel.
25. FX / AUX SEND Unbalanced jack output from FX SEND routes.  
Overrides internal DSP effects when a jack is connected.  
The mix is governed by FX levels from each channel.
26. FX MUTE  
Footswitch jack to mute FX.  
Connect a non-latching footswitch here to mute or un-mute the FX SEND signal.
27. PHONES  
Stereo headphones 6.3mm jack output

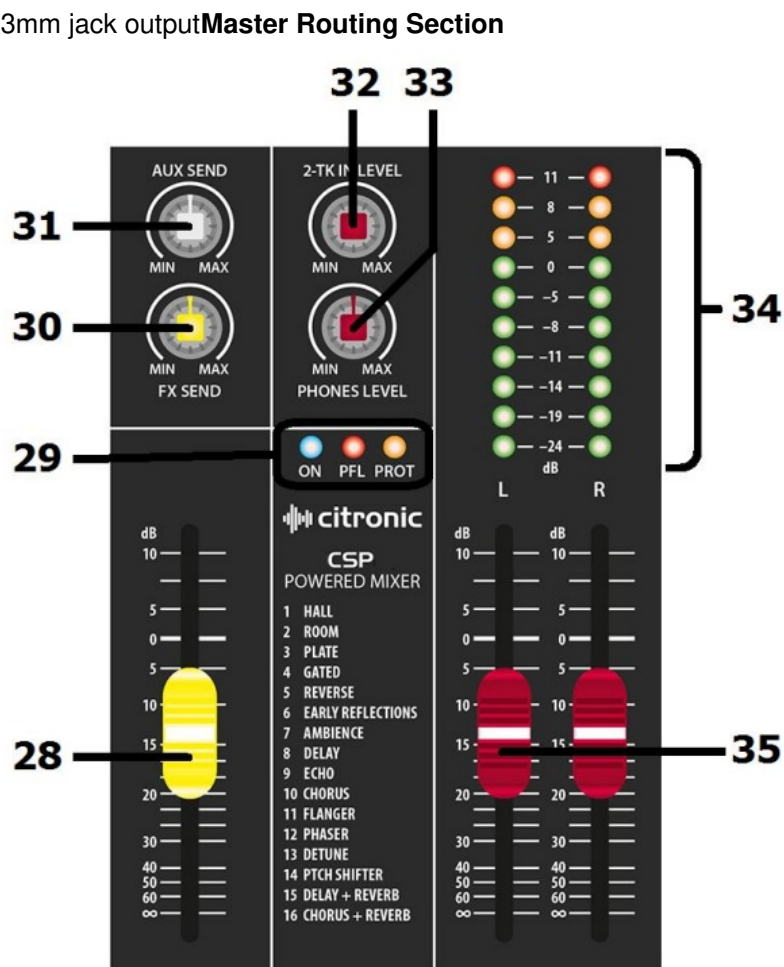

28. EFFECTS fader Controls the level of FX to the main mix
29. Status LEDs  
Indicate Power On, PFL activated & Amplifier Protect (CSP only) statuses
30. FX SEND

Overall level control of signals routed to the FX Send bus, either for internal DSP or FX Send output (20). When using the internal DSP, it is important to observe the LED level meter (16) on the DSP section and if the signal is clipping, reduce the FX SEND level accordingly.

### 31. AUX SEND

Overall level control of signals routed to the AUX Send output (19)

### 32. 2-TK LEVEL

Level control for the 2-track RCA inputs

### 33. PHONES LEVEL

Level control for headphones output. Pressing this button reverses this by routing the output of the PC or Mac back to the PC interface for playback.

### 34. VU meters

Dual 10-segment LED ladders indication output level (or channel level if PFL is active)

### 35. Master faders

Controls for main Left & Right output levels

## Rear Panel



### 36. Speaker outs (CSP only)

Left & Right twist-lock SPK connectors for speaker connection (4Ω min.)

### 37. Cooling fan vent (CSP only)

Ventilation for an internal cooling fan. Do not obstruct or cover.

### 38. +48V switch

Rocker switches to enable +48V phantom power to all XLR inputs.

### 39. Power switch

Illuminated rocker switch for main power on/off.

### 40. Fuse holder

Integral holder for 5 x 20mm fuse. Replace only with the type indicated.

### 41. IEC mains inlet

Mains connection. Ensure voltage as indicated. Use IEC lead supplied.

## Powering up

Connect the IEC inlet (40) to mains power using the supplied mains lead. In case of the fuse blowing, replace only with the type indicated. If the fuse is repeatedly blowing, refer to qualified service personnel.

The illuminated rocker switch activates the main power to the unit.

## Phantom power

In addition to the mains power switch, the rear panel has an additional rocker switch which when switched on, enables +48V phantom power to the XLR input connectors. This is mainly used for condenser microphones that

do not have an internal battery or to remotely power D.I. boxes for patching instruments directly into the mixer.

### Connecting Speakers (CSP only)

When connecting speakers to the CSP-series mixers, ensure that the combined load for each output (left or right) is no lower than 4 Ohms (4Ω). To make sure of this, check the speaker manufacturer's information.

If connecting more than one speaker to an output channel, observe the following calculation method.

$$\frac{1}{\text{Impedance of speaker 1}} + \frac{1}{\text{Impedance of speaker 2}} = \frac{1}{\text{Total Impedance}}$$

**Note:** normally, speakers will be connected in parallel by connecting a speaker lead from one to another.

Most PA and sound reinforcement speakers are 8Ω, so we consider that  $1/8 + 1/8 = 1/4$ .

Therefore, when connecting 2 x 8Ω speakers together in parallel, the resulting total load is 4Ω.

It is also important to ensure that the power delivered to the speakers will not overload them.


When connecting 2 x 8Ω speakers together on one channel, each speaker will equally receive half of the output of that channel.

### Specifications

Model	CSP-408	CSL-8	CSP410	CSL-10	CSP71 4	CSL-1 4
Power supply	230Vac, 50/60Hz (IEC)					
Fuse rating	T10A	T1A	T10A	T1A	T15A	T1A
Power consumption (max)	600W	25W	600W	25W	1000W	25W
Output power RMS @ 4Ω	2 x 200W	N/A	2 x 200W	N/A	2 x 350W	N/A
Output power RMS @ 8Ω	2 x 130W	N/A	2 x 130W	N/A	2 x 230W	N/A
Inputs mic/line	4 x ball. XLR/TRS jack		6 x ball. XLR/TRS jack		10 x ball. XLR/TRS jack	
Inputs stereo line	2 x L+R jack					
Input level	+24dBu					

Output level	+26dBu	
Sensitivity	-60 to +14dBu (mic), -40 to +14dBu (line),	
Frequency response	20Hz – 30kHz (+/-0.5dB)	
CMRR	>74dB typical @1kHz (mic)	
THD+N	<0.01% (channel to main out)	
Crosstalk	>85dB (fader mute), >82dB (channel)	
Input impedance	21c52 (balanced mic), 10162 (balanced line)	
Output impedance	<75Q	
Noise rms:22Hz-22kHz	-122dBu (EIN), -82dBu (mix)	
Phantom power	+48V globally switchable to all XLR inputs	
Headphone output	6.3mm stereo jack, 30-600Q	
2-track	2 x RCA in & out (-2dBu)	
EQ	High	12kHz $\pm$ 15dB shelving
	Mid	2.5kHz $\pm$ 15dB bandpass
	Low	80Hz $\pm$ 15dB shelving
Master graphic EQ bands	63, 160, 400, 1k, 2.5k, 6.3k, 16kHz	

Effects	16 program, 24-bit DSP, 40khz					
Headphone output	Stereo 6.3mm jack (30-600 Ohms recommended)					
Console Dimensions (H x W)	310 x 320mm		360 x 320mm		475 x 320mm	
Depth	153mm	107mm	153mm	107mm	153mm	107mm
Weight	6.80kg	3.00kg	7.35kg	3.50kg	10.40kg	4.50kg

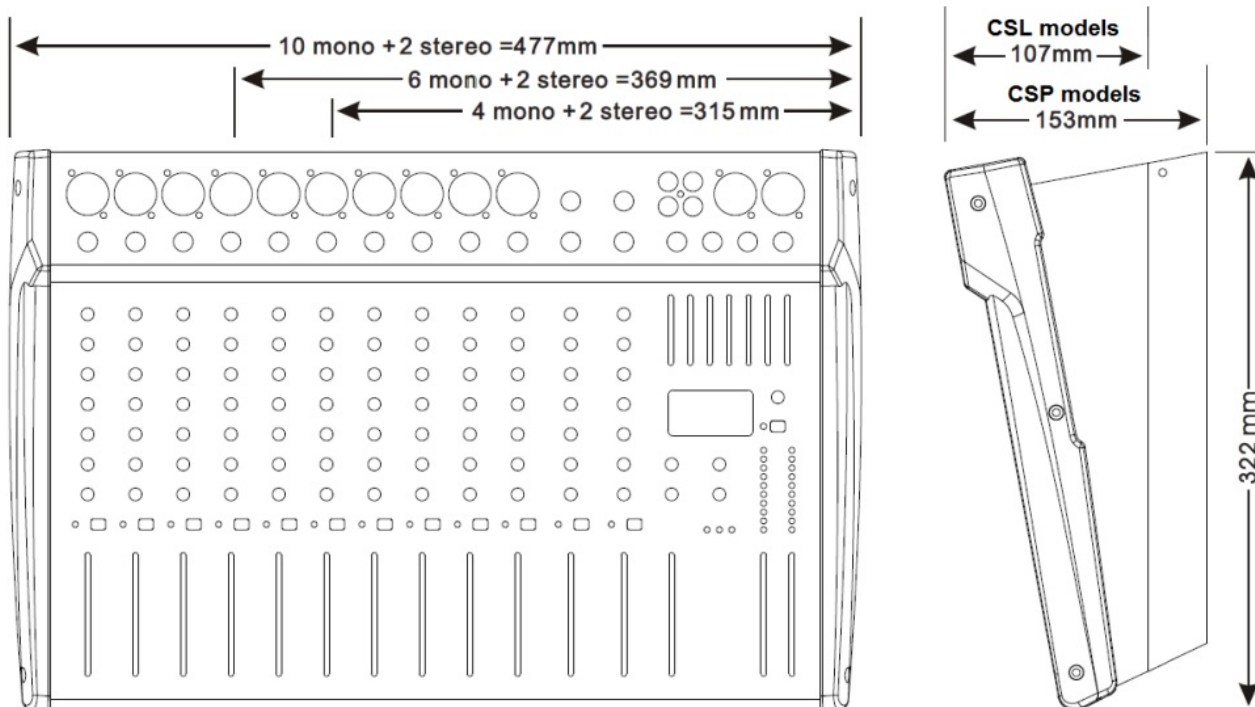


## Troubleshooting

No power "ON" LED on the control panel	Ensure mains outlet voltage is correct for the unit
	Use power lead supplied with the unit and check condition is OK
	Check power is switched on at the rear panel

	Check IEC fuse — if blowing fuses refer to qualified service personnel
Power LED is on but no other LEDs and no output	Check input signals and condition of connection leads
	Check GAIN is not too low on channel input(s)
	Check channel fader, GAIN, and EQ controls are not turned fully down
	Check MASTER faders are not fully down
	When using condenser microphones, use an external phantom power unit
	Check that PFL buttons are all switched out
	Check that all Graphic EQ sliders are not fully down
Power light and VU LEDs lighting but no main or speaker output	Check that Main L+R outputs are not muted
	Check MASTER faders are not fully down
	Check speakers are functional, and leads are OK and connected properly
“PROT” indicator is lit and no output (CSP only)	<p>Protect mode — switch off power immediately</p> <p>Disconnect speakers and switch the power back on to the unit.</p> <p>If the unit powers up OK and the PROT light is off, refer speakers to qualified service personnel. If PROT is still lit, switch off the power and refer CSP unit and speakers for checking by qualified service personnel.</p>
VU LEDs do not show MAIN output levels	Check that PFL buttons are all switched out

Output is very loud or distorted	Check the level of the input signal is not too high
	Reduce channel GAIN and EQ settings
	Reduce channel and MAIN faders levels
	Ensure Hi-Z line-level input(s) not connected via XLR
	Check AUX and EFFECT level controls and reduce if necessary
Output is working but at a very low level	Check input audio source level is not too low
	Ensure low impedance mic or line signal is not connected via jack
	Increase channel GAIN control and EQ settings if turned down
	Increase channel and MAIN faders levels
Feedback (loud squealing or howling from mics)	Face microphone away from speakers and monitors
	Reduce channel GAIN level and EQ level(s)
	Reduce AUX and/or EFFECT levels
	Reduce channel and/or MAIN fader levels

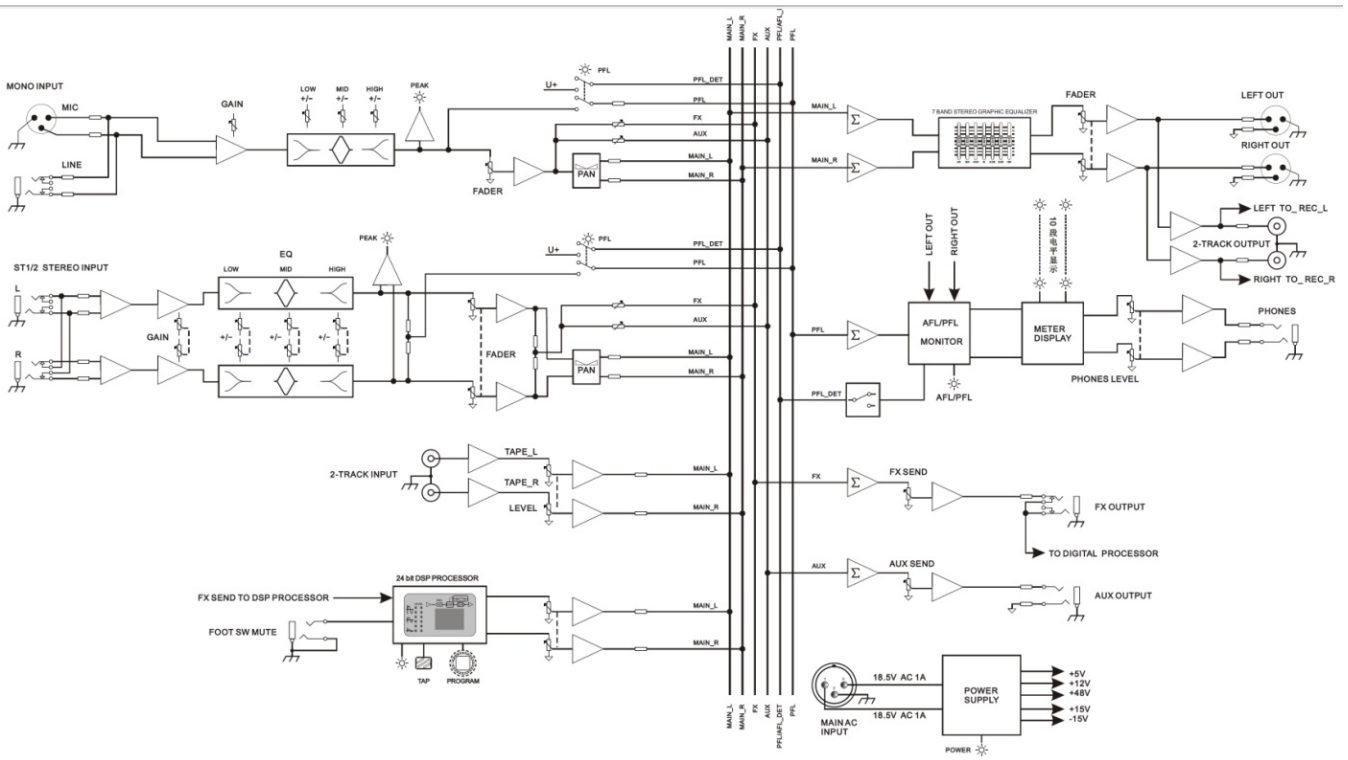

Disposal: The “Crossed Wheelie Bin” symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed of with other household or commercial waste at the end of its useful life.

The goods must be disposed of according to your local council guidelines

Errors and omissions excepted. Copyright© 2021.

AVSL Group Ltd. Unit 2-4 Bridgewater Park, Taylor Rd. Manchester. M41 7JQ

AVSL (EUROPE) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, Ireland.

### CSP & CSL-series User Manual

## Documents / Resources

	<p><b><a href="#">citronic CSL-SERIES Mixing Consoles [pdf] User Manual</a></b>          CSL-SERIES Mixing Consoles, CSL-SERIES, Mixing Consoles</p>
--	--